

CX-CO-DUAL 29.11.12 Rev 4.12 PAG.1/5											
FUNC.	CLARION	KENWOOD	JVC	PIONEER UNICARS EAGLE3.5 EAGLE2D EAGLE2DBT EAGLE2DGPS EAGLE2DNAV EAGLE2D62NB		SONY PHONOCAR VM040-VM041 NAVIS NS-1770 Solo su richiesta Only on request		ALPINE	VDO IR NO Only on request		PANASONIC
FLASH	IR NO 1	IR NO 2	IR NO 3	IR NO 4		IR NO 5		IR NO 6	IR NO 7		IR NO 8
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	FUNC	SOURCE PHONE CLOSE	SOURCE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE	SOURCE	MODE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	PRESET +	MUTE	MUTE
7	BAND	UP	UP	UP	BAND	UP	OFF	UP	X	UP	PWR
8	DISP	DOWN	DOWN	DOWN	UP	DOWN	UP	DOWN	X	DOWN	PROG
9	TA	PHONE ANSWER	PHONE ANSWER	X	DOWN	X	DOWN	PHONE ANSWER	X	X	X
10	INPUT SEL	SOURCE PHONE CLOSE	PHONE CLOSE	X	FUNC	X	BAND	PHONE CLOSE	X	X	X

FUNCTION TAB								
FUNC.	PANASONIC CAR AV	DIGITAL DYNAMIC 2005	DIGITAL DYNAMIC 2006	DIGITAL DYNAMIC 2007	BLAUPUNKT	AUDIOMEDIA 1 AKAI AMV367RVD AMV368RVD AMV308RVD AMV358DD GSM649 MDM579 MSM349 MDF359 SVT8000DVD VRX278RUSB VRX279RUSB	AUDIOMEDIA 2 FMS476DD	AUDIOMEDIA 3 AMV477VD AMV578VD AMV497DD GSM779 MSM479 AUTOSONIK NURBURGRING 1700 PHONOCAR VM040 DIGITAL DYNAMIC DYMAGE M700 IR ZENEC ZE-MC194 FILO E IR 16
FLASH	IR NO 9	IR NO 10	IR NO 11	IR NO 12	IR NO 13	IR NO 14	IR NO 15	
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	MODE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	PWR	PWR	PWR	PWR	UP	UP	UP	UP
8	PROG	X	X	X	DOWN	DOWN	DOWN	DOWN
9	X	X	X	X	OK	BAND	BAND	BAND
10	X	X	X	X	X	SEL	SCAN	PWR

FUNCTION TAB									
FUNC.	AUDIOMEDIA 4 AM10RUSB	AUDIOMEDIA 5 AMV397DD AMV377VD	LG	ECLIPSE AVN2227P AVN4429 AVN726EE Only on request	AUTOSONIK SUZUKA 3400 LE MANS 1200 BAHRAIN 1100 KENVOX AFRICA TWIN 1400 RAPTOR 1200 LOW RIDER 1100	AUTOSONIK HOCKEHNEIM 1150 MONTECARLO 1350 INDIANAPOLIS 2650 IR JEREZ 1160	ECLIPSE AVN8826 CD8445E CD4525E AVN726EE	MACROM	OSIO
FLASH	IR NO 17	IR NO 18	IR NO 19	IR NO 20	IR NO 21	IR NO 22	IR NO 23	IR NO 24	IR NO 25
1	VOLUME —								
2	VOLUME +								
3	SEEK —								
4	SEEK +								
5	SOURCE	SOURCE	SOURCE	MODE	SOURCE	SOURCE	SOURCE	MODE	MODE
6	MUTE	MUTE	MUTE	X	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND	UP	BAND	X	PLAY/PAUSA	BAND	UP	UP	POWER
8	SEL	DOWN	DISP	X	STOP	SEL	DOWN	DOWN	PLAY
9	PWR	BAND	SEL	X	X	X	X	PLAY/PAUZE	STOP
10	DISP	PWR	NUMBER	X	X	X	X	STOP/BAND	OPEN/CLOSE

FUNCTION TAB PAG.2/5

FUNC.	PHONOCAR 1 FORYOU CMU128 CM123 VM020 VM021 VM024 FILO E IR DIGITALDYNA MIC DYNAMO M5 DYNAMO C10 DYNAMO C15 IR NO 26	PHONOCAR 2 DM736 VM016 FILO E IR MACROM M-DVD4650R IR NO 27	PHONOCAR 3 (1)VM029 VM030 VM031 VM032 VM036 AUTOSONIK DAYTONA 7000 FILO E IR UNICARS EAGLE3.5 EAGLE2D EAGLE2DBT EAGLE2DGPS EAGLE2DNAV IR NO 28	BELSON 1 (NAVIX-650 (DUAL ZONE) IR NAVIX-450 IR NO 29	BELSON 2 (NAVIX-440) IR NO 30	BELSON 3 (NAVIX-750) IR NO 31	BELSON 4 BS3112 IR NO 32	LG2 IR NO 33
FLASH								
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	MODE	MODE	MODE	MODE	MODE	MODE	SRC
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	PLAY/PAUSE	PLAY/PAUSE	PLAY/PAUSE	BAND	BAND	BAND	BAND	BAND
8	BAND	BAND	BAND	EQ	TA	EQ	SEL	DISP
9	INT	REPEAT	PHONE ANSWER	X	X	X	PHONE ANSWER	SEL
10	REPEAT	POWER	PHONE CLOSE	X	X	X	PHONE CLOSE	SHUFFLE

TABELLA FUNZIONI / FUNCTION TAB

FUNC.	AUDIOMEDIA 6 AMV398D GDM979 GDF879 GSM639 IR AUTOSONIK MONTECARLO 2010 DAYTONA 8000 INDIANAPOLIS 2600 INDIANAPOLIS 6100 Navi IR NO 34	AUDIOMEDIA 7 AKAI STV7800DVD IR NO 35	AUDIOMEDIA 8 GPS678DD GPS778VD AMV588VD IR NO 36	AUDIOMEDIA 9 AMV108RVD AMV208RVD IR NO 37	ZENEC1 ZE-MC192 ZE-NC2040 XZENT XT8020 DIGITALDYNAMIC DX650D DX700 IR NO 38	ZENEC2 (ZE-MC192/SMART DIAL REMOTE CONTROL) IR NO 39
FLASH						
1	VOLUME —					
2	VOLUME +					
3	SEEK —					DOWN
4	SEEK +					UP
5	SRC	SRC	SRC/POWER	SRC	SOURCE	OK (CONF.SEL)
6	MUTE	MUTE	MUTE	MUTE	MUTE	MEMOR. RADIO
7	UP	STOP	STOP	BAND	BAND/STOP	X
8	DOWN	OK	ENTER	REPEAT	DOWN	X
9	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PLAY PAUSE	UP	X
10	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	POWER	OK	X

TABELLA FUNZIONI / FUNCTION TAB

FUNC.	HARDSTONE 1 HS DPM62 HS DPM63 IR NO 40	HARDSTONE 2 HS DPM30 AUTOSONIK MONTE FUJI 2350 DISTA VISION V1-D8200 IR NO 41	HARDSTONE 3 HS DPM31 HS DPM61 FILO E IR PHONOCAR VM017 VM018 FILO E IR VM035 IR 42	HARDSTONE 4 HS DPM36 HS DPM70 IR NO 43	HARDSTONE 5 HS CD1970 IR NO 44
FLASH					
1	VOLUME —				
2	VOLUME +				
3	SEEK —				
4	SEEK +				
5	MODE	SRC	SRC	SRC	MODE
6	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND	BAND	BAND	BAND	BAND
8	<<	RDM	UP	AST	RPT
9	>>	RPT	PHONE ANSWER	RPT	SEL
10	POWER	SEL	PHONE CLOSE	RDM	NEXT 10 TRACK

FUNCTION TAB PAG.3/5								
FUNC.	EVUS DD710X	TV DIGITALE KENWOOD	ALPINE 2 RUE-4912 DVD	ALPINE 3 RUE-4912 NAVI	PANASONIC 3 RM-600D	ECLIPSE 3 RMC101	HARDSTONE 6 HS-DPM7G	NAVIS NS-2360
FLASH	IR NO 45	IR NO 46	IR 47	IR 48	IR 49	IR 50	FILO E IR 51	IR 52
1	VOLUME —	DOWN	VOLUME —					
2	VOLUME +	UP	VOLUME +					
3	SEEK —	SEEK —	SEEK —					
4	SEEK +	SEEK +	SEEK +					
5	MODE	X	SRC	SRC	UP	SRC	MODE	MODE
6	MUTE	X	MUTE	UP	DOWN	UP	MUTE/RIFIUTA	MUTE
7	BAND	X	UP	DOWN	BAND	DOWN	BAND/RISPONDI	BAND
8	POWER	X	DOWN	X	PLAY	POWER	RPT	PLAY/PAUSE
9	PLAY/PAUSE	X	X	X	X	X	SEL	PHONE ANSWER
10	ENTER/TEL	X	X	X	X	X	PWR	PHONE CLOSE

FUNCTION TAB								
FUNC.	SKYWAY GM4300	HARDSTONE7 HS DPM8G PHONOCAR N6205	MACROM2 M-DVD5551R M-DVD6545R	PANASONIC4 CQ-D1703N	AUTOSONIK SANTA MONICA 911BT IMOLA 912BT KENVOX SCRAMBLER 5200 IR NO 57	DIGITALDYNA MIC DYMAGE-N620	INNOVATE INVM3231	SKYWAY GM-7540 NAVI
FLASH	IR NO 53	IR NO 54	IR NO 55	IR NO 56	IR NO 57	IR NO 58	IR NO 59	IR NO 60
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	MODE	MODE	SRC/PWR	SRC	SRC	SRC	MODE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND/RDM	BAND	RDM	SEL	PHONE ANSWARE	<<	<<	BAND
8	PLAY/PAUSE	RPT	RPT	RDM	PHONE CLOSE	>>	>>	PLAY/PAUSE
9	PSCN/RPT	PLAY/PAUSE	PLAY/PAUSE	RPT	POWER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER
10	POWER	POWER	STOP/BAND	SCAN	X	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE

FUNCTION TAB								
FUNC.	CASKA CA1621G	MACROM3 M-DVD6555R M-DVD6556R IR NO NAVIS NS-1770 IR NO PHONOCAR VM041	MACROM4 M-DVD5542R M-DVD5561R M-DVD5562R IR NO M-DVD5541R DIGITAL DYNAMIC DYMAGE NF-630 UNICARS ITALIA EAGLE2D62NB IR NO KENVOX NINJA 7200 NINJA 7200 N IR NO	KENVOX 1 REPLICA 125	KENVOX 2 CAMEL 500	KENVOX 3 BRUTALE 3500	ZENEC 3 ZE-NC520 ZE-NC524	BECKER TRAFFIC PRO Only on request
FLASH	IR NO 61	IR NO 62	IR NO 63	IR NO 64	IR NO 65	IR NO 66	IR NO 67	IR NO 68
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	MODE	SRC	SRC	SRC	X	SRC	SRC	MODE
6	MUTE	MUTE	MUTE	POWER	X	MUTE/POWER	MUTE	X
7	BAND	UP	PLAY/PAUSE	BAND	X	BAND/RETURN	BAND/STOP	X
8	>>	DOWN	BAND	PLAY	X	PLAY/PAUSE	DOWN	X
9	<<	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	X	ENTER	PHONE ANSWER	X
10	RPT	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	X	MENU	PHONE CLOSE	X

FUNCTION TAB PAG.4/5								
FUNC.	QUANTUM	PHONOCAR 4 VM050	TV_HELLAS	DISTA 1 VISION V1-DB210	AUDIOMEDIA 10 AMV398DD	BLAUPUNKT 2 ATLANTA110 MADRID210 TORONTO410BT SAN FRANCISCO310	PHONOCAR 5 VM066	DIGITALDYN AMIC DYMAGE-M310
FLASH	IR NO 69	IR NO 70	IR NO 71	IR NO 72	IR NO 73	IR NO 74	IR NO 75	IR NO 76
1	X	VOLUME —						
2	X	VOLUME +						
3	P —	>> (NEXT TRACK)	SEEK —					
4	P +	> (Radio Tuner)	SEEK +					
5	X	SRC	X	SRC	SRC	SOURCE	SRC	MODE
6	X	MUTE	X	MUTE/POWER	MUTE	MUTE	MUTE	MUTE
7	X	PLAY/PAUSE	X	BAND	UP	UP	PLAY	PLAY/PAUSE
8	X	BAND	X	>/>>	DOWN	DOWN	POWER	BAND
9	X	PHONE ANSWER	X	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	PHONE ANSWER	RPT
10	X	PHONE CLOSE	X	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	PHONE CLOSE	POWER

TABELLA FUNZIONI / FUNCTION TAB						
FUNC.	DIGITALDYNAMIC DYNAMO-C30	DIGITALDYNAMIC DYNAMO-B60	AUTOSONIK 4 TOURING-111 TROPHY BT-113	PHONOCAR 6 VM037	BLAUPUNKT NEW YORK 800 (resistive)	HARDSTONE 8 HS-DPM71 HS-DPM64 HS-DPM69
FLASH	IR NO 77	IR NO 78	IR NO 79	IR NO 80	IR NO 81	IR NO 82
1	VOLUME —					
2	VOLUME +					
3	SEEK —					
4	SEEK +					
5	SRC	SRC	MODE	SRC	SRC or PHONE ANSWER	SOURCE/PWR
6	POWER	POWER	MUTE	MUTE	MUTE or PHONE CLOSE	MUTE
7	PLAY/PAUSE	PLAY/PAUSE	BAND	BAND	X	<<
8	AUDIO	AUDIO	UP	UP	X	>>
9	X	X	DOWN	DOWN	PHONE ANSWER or SRC	PHONE ANSWER/BACK
10	X	X	PLAY	PLAY	PHONE CLOSE or MUTE	PHONE CLOSE/ROOT

TABELLA FUNZIONI / FUNCTION TAB							
FUNC.	PHONOCAR 7 VM033	MACROM 5 M-DVD7702 M-DVD7701 M-DVD7602 M-DVD7601	CLARION 2 NX-501E	BLACHSTONE BS-ARM11	RADIO JEEP PHONOCAR	RADIO AUDI A4 PHONOCAR	CLARION 3 NX502E
FLASH	IR NO 83	IR NO 84	IR NO 85	IR NO 86	IR NO 87	IR NO 88	IR NO 89
1	VOLUME —						
2	VOLUME +						
3	SEEK —						
4	SEEK +						
5	SRC	SRC	SOURCE/PWR	SOURCE	SOURCE	SOURCE	SOURCE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
7	BAND	PLAY/PAUSE	RDM	X	X	X	X
8	UP	RIGHT	TA	X	X	X	X
9	DOWN	PHONE ANSWER	PHONE ANSWER	X	PHONE ANSWER	X	PHONE ANSWER
10	ENTER	PHONE CLOSE	PHONE CLOSE/BAND	X	PHONE CLOSE	X	PHONE CLOSE

ECLIPSE WIRE CONNECTION (number flashes 20):

AVN2227P: brown - gray (radio) with violet (interface)/ brown—gray - black (radio) with brown (interface).

AVN4429 e AVN726EE: brown - gray (radio) with brown (interface)/ brown - gray - black (radio) with violet (interface).

CAUTION

PROFILES 4 (PIONEER), 5 (SONY), 7 (VDO) AND 20 (ECLIPSE) ARE MUTUALLY EXCLUSIVE. THE JUMPER J5 DOESN'T BE SET IF YOU INSTALL A BLAUPUNKT 2 (ATLANTA 110-MADRID 210– TORONTO 410 BT, SAN FRANCISCO 310) AND BLAUPUNKT NEW YORK 800.

⁽¹⁾PHONOCAR RADIO VM029 HAS ONLY THE FOLLOWING FUNCTIONS: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE AND MUTE.

BLAUPUNKT
PHONOCAR VM024

3 2 1



J5

RADIO MODEL	RADIO ADAPTER
CLARION, JVC, BELSON NAVIX-450, BS3112; MACROM M-DVD5542R, M-DVD5561R, M-DVD5562R ; DIGITAL DYNAMIC DYMAGE-N620; SKYWAY GM-7540 NAVI; AUTOSONIK DAYTONA 8000, INDIANAPOLIS 2600, MONTECARLO 2010, INDIANAPOLIS 6100 Navi ; PHONOCAR VM033, VM037, VM029.	CX-ST-JV12
PIONEER; *SONY; PHONOCAR *VM040(flashes 5), *VM041 (flashes 5), **VM024; NAVIS NS-1770 (flashes 5); UNICARS EAGLE3.5, EAGLE2D, EAGLE2DBT, EAGLE2DGPS, EAGLE2DNAV, EAGLE2D62NB (flashes 4); EVUS DD710X (flashes 4); INNOVATE INVM3231 (flashes 4); CASKA CA1621G (flashes 4); **AUTOSONIK SUZUKA 3400, LE MANS 1200, BAHRAIN 1100; **KENVOX AFRICA TWIN 1400, RAPTOR 1200, LOW RIDER 1100; DIGITAL DYNAMIC DYMAGE NF630 (flashes 4), DYMAGE M700 (flashes 4); BLAUPUNKT NEW YORK 800 RESISTIVE (max 6 button).	CX-ST-PI12
ALPINE.	CX-ST-AL22
KENWOOD.	CX-ST-KE11
PANASONIC; PHONOCAR FORYOU, CMU128, CM123, VM020, VM021, DM736, VM016, VM017, VM030, VM031, VM032, VM036, VM050, N6205, VM066; AUTOSONIK DAYTONA 7000; ZENEC ZE-MC194, ZE-MC192, ZE-NC2040, XZENT XT8020, ZE-NC520, ZE-NC524; DIGITAL DYNAMIC DX650D, DX700; HARDSTONE HS DPM61, HS DPM62, HS DPM63, HS DPM31, HS DPM7G, HS DPM8G, HS DPM71, HS DPM69, HS DPM64; MACROM M-DVD6555R, M-DVD6556R; KENVOX NINJA 7200, NINJA 7200 N; RADIO JEEP; RADIO AUDI A4.	CX-ST-PN21
BLAUPUNKT; BLAUPUNKT 2 ATLANTA 110, MADRID 210, TORONTO 410 BT, SAN FRANCISCO 310.	CX-ST-BL12
*VDO.	CX-ST-VD11
*ECLIPSE AVN2227P, AVN4429, AVN726EE.	CX-ST-EL11
BLACHSTONEBS-ARM11 Radio resistive to learning, to be set on 10k radio, the transmission source is on the blue wire to the radio (MODE-KEY) to be connected with our brown, the pink wire to the radio (AD-KEY) should be connected with our purple and the black wire to the radio with our black.	
* AVAILABLE ONLY WITH DEDICATED HARDWARE	
** TO CUT WIRE IN POSITION 2 OF MICROFIT.	

